



## Candy Floss Instructions

### Before You Plug in Machine

1. Install unit in a level position.
2. Make sure all machine switches are OFF before plugging equipment into receptacle.
3. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
4. DO NOT use a grounded to un-grounded receptacle adapter (where applicable).

### OPERATING INSTRUCTIONS

#### Controls and Their Functions

##### *MOTOR & MASTER SWITCH*


Two position, lighted rocker switch - turns Motor ON/OFF and supplies power to the Heat Switch. The green light ON indicates there is power to the unit.

##### *HEAT SWITCH*

Two position, lighted rocker switch - turns the heating element ON/OFF. The green light ON indicates there is power to the element.

##### *HEAT CONTROL*


The Heat Control adjusts the power to the heating element. Turn the knob clockwise to increase power to the heating element; turn counter-clockwise to decrease power to the heating element.

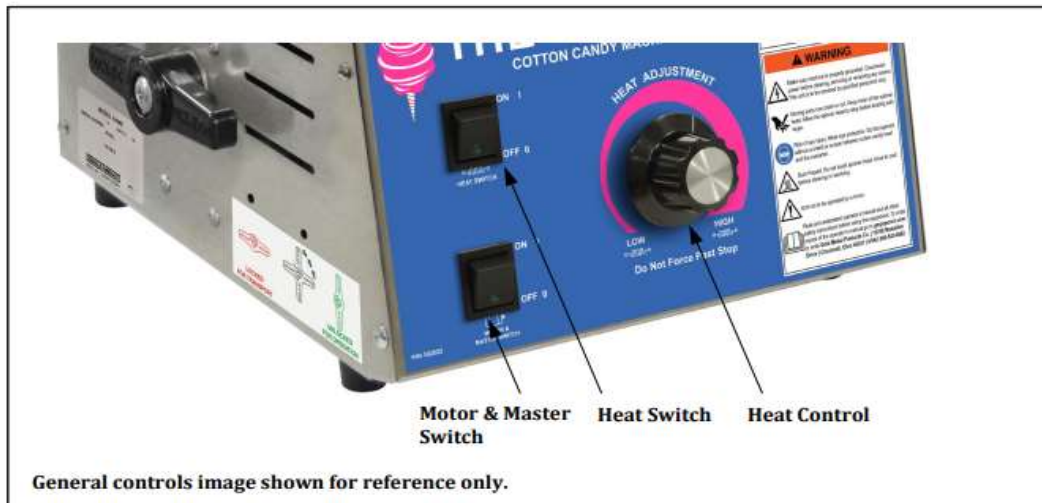



## Machine Operation

### Floss Machine Operation

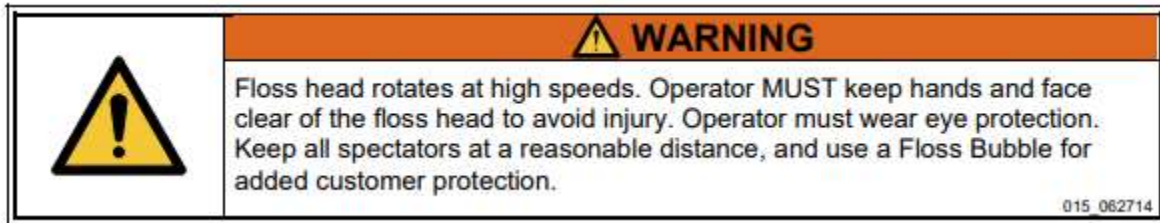


1. Follow the guidelines described in the Electrical Requirements Section for supplying power to machine.
2. The Heat Switch and the Motor & Master Switch should be in the OFF position.
3. With the spinner head stopped, pour floss sugar into the spinner head. Always fill it 90% full of sugar. This 90% level is necessary to obtain a balanced condition in the floss head.

**DO NOT OVERFILL!**

**IMPORTANT: NEVER add sugar when motor is running.**

4. Turn the Motor & Master Switch ON. Wait 10 seconds, and then turn Heat Switch ON.
5. Turn the Heat Control Knob clockwise to maximum setting to initiate the fastest possible warm-up.
6. The machine should start making floss in about 20-30 seconds. When unit starts making floss, **reduce the heat setting**. Turn the Heat Control counter-clockwise to eliminate smoking. If the unit is operated at the “start-up” setting it will carbonize the element.

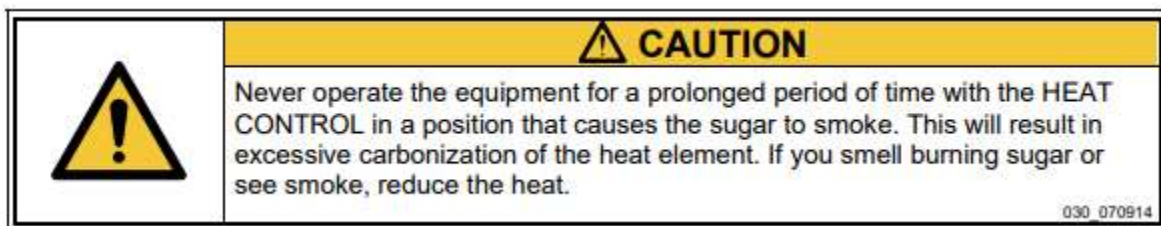


7. Once the ideal Heat Control setting is found, operate with the setting near this position each time.
8. When the floss head needs to be refilled with sugar, or to stop the machine, turn the Heat Switch OFF and allow the motor to run for a few seconds to start cooling down the floss head, then turn the Motor & Master Switch OFF.

*When completing operation for the day (or any prolonged period), follow the instructions in the Shutdown Procedure/Cleaning and Care section of this manual.*


### Making Floss

Pick a cone, if it sticks in the stack of cones, twist it off the stack.

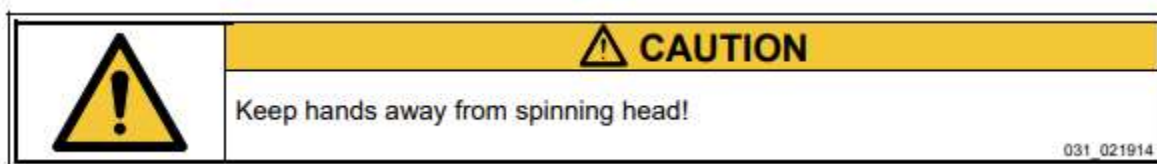

Hold an inch or two of the pointed ends of a cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly. See steps 1 thru 8 shown below.

If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger. Make sure room humidity is not too high, or product will be "heavy".

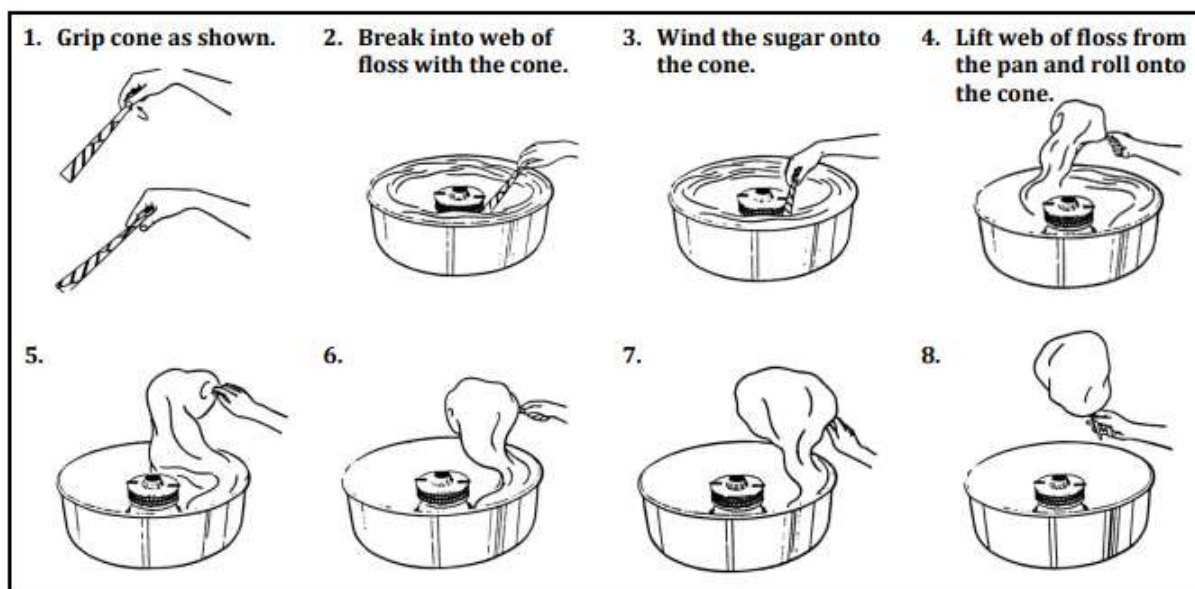





	 <b>WARNING</b>
	<ul style="list-style-type: none"> <li>• DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD.</li> <li>• DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING.</li> <li>• WEAR EYE PROTECTION.</li> <li>• DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD.</li> <li>• USE FLOSS CONE TO COLLECT COTTON CANDY.</li> </ul> <p style="text-align: right; font-size: small;">032_021914</p>

## Shut Down Procedure/ Care and Cleaning

### Shut Down Procedure

1. When completing operation for the day (or any prolonged period), run the floss head completely empty of sugar.
2. Turn the Heat Control dial to the maximum position and allow the machine to run approximately 3-4 minutes. This will burn any excess sugar out of the floss head and prevent any excess carbon build-up.
3. Turn the Heat Switch OFF and allow the motor to run for 1-2 minutes to “cool down” the floss head.
4. Turn the Motor & Master Switch OFF and allow the motor to come to a COMPLETE stop.
5. **NEVER put water in the floss head.**

	 <b>DANGER</b>
	<p>Machine must be properly grounded to prevent electrical shock to personnel. <b>DO NOT immerse in water.</b> DO NOT clean appliance with a water jet or steam cleaner. Always unplug the equipment before cleaning or servicing. <span style="float: right; font-size: small;">025_051321</span></p>

	 <b>WARNING</b>
	<p>Burn Hazard. <b>DO NOT</b> touch spinner head. Allow to cool before cleaning or servicing. Avoid contact with molten sugar. <span style="float: right; font-size: small;">006_092414</span></p>