



Sno-Kone Machine Instructions:

Machine Description

The Sno-Kone machine is an automatic shaver with a tremendous capacity. You will find that it keeps up with any demand; as soon as you put ice into the hopper, it is shaved into small ice chips. The Sno-Kone Machines consist of a hopper, which houses the cutter head, the pusher handle, the motor, and the display case.

Electrical Requirements

It operates on 120 Volt, 15 Amp, single phase, 60 cycle AC current.

Before You Plug in the Machine

1. Install the Sno-Kone Machine on a level surface
2. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
3. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
4. DO NOT use a grounded to un-grounded receptacle adapter.

GENERAL INSTRUCTIONS

To Operate the Sno-Kone Machine

1. Load hopper with Ice.
2. Close pusher cap and apply gentle downward pressure.
3. Turn on the power switch.
4. Press and hold in the momentary switch. Release the button once all the ice has been shaved.
5. Do not lift the pusher cap until the motor is off and the shaver head has stopped.

NOTE: Never allow any foreign or metallic objects around the shaver area of the Sno-kone machine. Ice picks, scoops, and debris that may be in the ice often damage blades.

Ice Requirements

The machine can take ice cubes or block ice if you break the block into pieces approximately 2 to 3 inches in size.

NOTE: The ice will not enter the shaving chute if the pieces are too large.

