



## PUNCH FOUNTAIN INSTRUCTIONS

### TOOLS NEEDED:

Favourite Punch Recipe

**DO NOT USE JUICES WITH PULP** – pulp will plug the pump resulting in damaging the Punch Fountain, damage fee's will apply

**DO NOT USE FLOATING FRUIT** – fruit will plug the pump resulting in damaging the Punch Fountain, damage fee's will apply

### OPERATING TIPS:

#### DO NOT USE EXTENSION CORD

- Ensure all four spouts are turned in toward the fountain
- Fill Punch Fountain with your favourite punch
- Punch Fountain **MUST** be kept **HALF FULL AT ALL TIMES** otherwise the punch fountain will not work properly and could result in damaging the motor, damage fee's will apply
- Turn switch to ON

*Ice can be used in the punch fountain to help keep the punch chilled.*

### CLEANING INSTRUCTIONS:

**NEVER IMMERSE FOUNTAIN IN WATER, THIS WILL DAMAGE THE PUNCH FOUNTAIN** damage fee's will apply

**NEVER ATTEMPT TO DISMANTLE THE PUNCH FOUNTAIN**, damage fee's will apply to dismantled fountains

1. Turn off and unplug punch fountain
2. Remove remaining punch
3. Fill Fountain with warm water
4. Plug in and turn switch ON
5. Run for 5 to 10 minutes
6. Turn off and unplug
7. Remove warm water

If you have any questions or concerns please call 403-291-0686.