



PANCAKE DISPENSER CLEANING INSTRUCTIONS

- Rinse pancake dispensers out with water only.
- **DO NOT TAKE APART**
- Dismantled pancake dispensers will be charged out as a damaged item.

If you have any questions or concerns please call 403-291-0686.

