



WWW.GOODTIMEPARTYRENTALS.COM

CALGARY

4605 76 AVE SE
CALGARY, AB T2C 3V3
B: (403)291-0686
F: (403)291-5581

SALES@GOODTIMEPARTYRENTALS.COM

OKOTOKS

105, 231 DON SEAMAN WAY
P.O. BOX 153
OKOTOKS, AB T1S 1A5
B: (403)938-1911 F: (403)938-1617

SALES2@GOODTIMEPARTYRENTALS.COM

Popcorn Machine Instructions:

Tools Needed:

All in one popcorn

Popcorn Bags or Containers to serve popped popcorn in

Popcorn Cart or secure level surface to place popcorn machine on

OPERATING TIPS:

DO NOT USE EXTENSION CORD TO POP THE POPCORN

Popcorn Machines take a great deal of energy and **require a full circuit of power**, sharing an outlet will cause the Popcorn Machine **NOT** to work and could also result in blown circuits.

Place machine on popcorn cart or secure level surface

Plug machine into power circuit

When ready to begin turn machine switches on: Lamp – Motor – Heat

On the **FIRST BATCH ONLY** let the popcorn kettle heat about 3 to 4 minutes before popping first batch

1. Add popcorn to heated kettle: cut premix bag along top edge of the **ALL IN ONE POPCORN** and squeeze pre-measured oil into kettle, immediately after oil melts and seasoning and corn into kettle
2. Empty kettle when about 99% of kettle contents are popped by rotating the handle of the kettle to dump the popcorn still in the kettle. * there is a stop to prevent the kettle from being rotated too far. *
3. Return kettle to upright position

To continue making popcorn repeats numbers 1 through 3 above

ON FINAL BATCH ONLY turn kettle heat switch OFF as soon as corn starts popping rapidly

BETWEEN POPPING: if between popping is 5 minutes or longer that you are not popping corn **TURN KETTLE HEAT** and **MOTOR OFF**

Turn switches back on when resuming popping. Allow a couple of minutes for kettle to reheat before popping

CLEANING INSTRUCTIONS:

After final batch turn all switches OFF and disconnect machine from power circuit

Empty all popped corn from kettle and machine

DO NOT WASH OR WIPE DOWN MACHINE, WATER CAN CAUSE DAMAGES TO THE MOTER. ALL CLEANING IS DONE BY GOOD TIME PARTY RENTALS STAFF.

If you have any questions or concerns please call 403-291-0686.