



Propane Cooker Instructions

Outdoor Use Only

Tools Needed:

- Crescent Wrench – tightening connections
- Bottle of soapy water (small pail will also work) – fitting and connection testing
- BBQ Lighter or Long Matches - start BBQ
- **Fire Extinguisher – we recommend having a fire extinguisher when using the outdoor BBQ's. For an additional cost Good Time Party Rentals offers Fire Extinguishers.**

Operating Tips:

1. Turn all burn controls to off
2. Position propane tank for connection ensuring the propane tank is in an upright position and connecting hose is not bent or kinked
3. Connect propane tank to COOKER tightening hose and COOKER connector with a wrench
4. Turn propane tank on turning left
5. Test with soapy water all fittings and connections of the propane to ensure all connections are fastened tightly and free of leaks. Pour soapy water over all fitting and connections if it bubbles the fitting and connections need tightening. If no bubbling occurs everything is connected correctly.
THIS MUST BE DONE BEFORE STARTING AND OPERATING THE COOKER
6. If there are NO LEAKS you are ready to start light the COOKER
7. While holding BBQ Lighter or long matches next to the burner, turn the far right control on. The burner should then ignite.
8. Adjust control knobs to desired temperature
DO NOT PUT AN EMPTY STOCK POT ON LIT BURNER
9. When cooking is complete turn the propane off from the tank turning knob to the right
10. Turn all burner controls to off
11. When the COOKER has cooled down disconnect propane from COOKER

If you have any questions or need assistance please call 403-291-0686