

Popcorn Machine Instructions



Tools Needed:

- All in one popcorn
- Popcorn Bags or Containers to serve popped popcorn in
- Popcorn Cart or secure level surface to place popcorn machine on

Operating Tips:

DO NOT USE EXTENSION CORD TO POP THE POPCORN

- Popcorn Machines take a great deal of energy and *require a full circuit of power*, sharing an outlet will cause the Popcorn Machine *NOT* to work and could also result in blown circuits.
 - Place machine on popcorn cart or secure level surface
 - Plug machine into power circuit
- When ready to begin turn machine switches on: Lamp – Motor – Heat

- On the *FIRST BATCH ONLY* let the popcorn kettle heat about 3 to 4 minutes before popping first batch
 1. Add popcorn to heated kettle: cut premix bag along top edge of the *ALL IN ONE POPCORN* and squeeze pre-measured oil into kettle, immediately after oil melts and seasoning and corn into kettle
 2. Empty kettle when about 99% of kettle contents are popped by rotating the handle of the kettle to dump the popcorn still in the kettle. * There is a stop to prevent the kettle from being rotated too far. *
 3. Return kettle to upright position
 - To continue making popcorn repeats numbers 1 through 3 above
- *ON FINAL BATCH ONLY* turn kettle heat switch OFF as soon as corn starts popping rapidly
- *BETWEEN POPPING:* if between popping is 5 minutes or longer that you are not popping corn *TURN KETTLE HEAT* and *MOTOR OFF*
- Turn switches back on when resuming popping. Allow a couple of minutes for kettle to reheat before popping

Cleaning Instructions:

- After final batch turn all switches OFF and disconnect machine from power circuit
 - Empty all popped corn from kettle and machine
- *DO NOT WASH OR WIPE DOWN MACHINE, WATER CAN CAUSE DAMAGES TO THE MOTER. ALL CLEANING IS DONE BY GOOD TIME PARTY RENTALS STAFF.*

If you have any questions or concerns please call 403-291-0686.