

# Punch Fountain Instructions



## Tools Needed:

- Favorite Punch Recipe
- *DO NOT USE JUICES WITH PULP* – pulp will plug the pump resulting in damaging the Punch Fountain, damage fee's will apply
- *DO NOT USE FLOATING FRUIT* – fruit will plug the pump resulting in damaging the Punch Fountain, damage fee's will apply

## Operating Tips:

### **DO NOT USE EXTENSION CORD**

- Ensure all four spouts are turned in toward the fountain
  - Fill Punch Fountain with your favorite punch
- Punch Fountain *MUST* be kept *HALF FULL AT ALL TIMES* otherwise the punch fountain will not work properly and could result in damaging the motor, damage fee's will apply

- Turn switch to ON
- Ice can be used in the punch fountain to help keep the punch chilled.

## **Cleaning Instructions:**

- **NEVER IMMERSE FOUNTAIN IN WATER, THIS WILL DAMAGE THE PUNCH FOUNTAIN** damage fee's will apply
- **NEVER ATTEMPT TO DISMANTLE THE PUNCH FOUNTAIN**, damage fee's will apply to dismantled fountains
  - Turn off and unplug punch fountain
    - Remove remaining punch
    - Fill Fountain with warm water
    - Plug in and turn switch ON
      - Run for 5 to 10 minutes
      - Turn off and unplug
      - Remove warm water

If you have any questions or concerns please call 403-291-0686.